



Bulova 2182 Movement Parts (1)

Compiled by EmmyWatch - https://www.emmywatch.com


$Parts \, List \, { m model} \, 2182$

 (All other parts same as basic series 218)

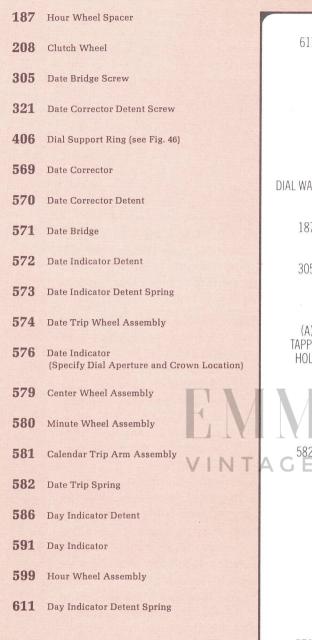

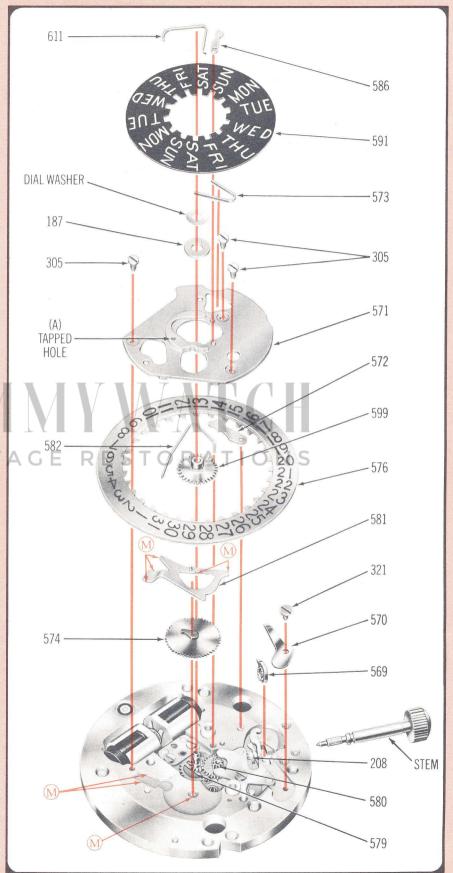





- a. Pull stem out (setting position).
- b. Remove hands.
- **c.** Remove dial (2 screws) and dial support ring #406.



Replacing dial and hands

- a. Pull stem out (setting position).
- b. Replace dial support ring #406 and dial (dial should be seated on dial support ring before tightening dial screws).

NOTE: The dial limits endshake in the day mechanism and should seat on the date bridge #571 at the center. If correction is necessary flatten dial slightly by placing it in a 214 ACCUTRON movement holder and apply light pressure at center with pencil eraser.

- c. Check hour wheel endshake (.05mm to .10mm). If necessary, adjust by means of hour wheel spacer.
- d. Turn crown counter-clockwise, moving the dial train ahead until the calendar advances—stop turning crown immediately.
- e. Replace hour and minute hands at 12 o'clock. The hour hand must fit tight; the minute hand only temporarily affixed. Check calendar advance, in relation to hand location, by turning hands backward to 5:30 o'clock and then forward. The calendar should advance when the hands reach 11:58 o'clock; reposition and/or secure minute hand when properly aligned.
- f. Replace sweep-second hand (be sure stem is "out").
- g. Check hack mechanism adjustment (page 20).
- h. Check index mechanism adjustment (pages 15-18).

