




Citizen C300,C320,C330 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Catalog No. C30/C31/C32/C33-1 ~ C30/C31/C32/C33-3


カタログ番号 C30/C31/C32/C33-1 ~ C30/C31/C32/C33-3

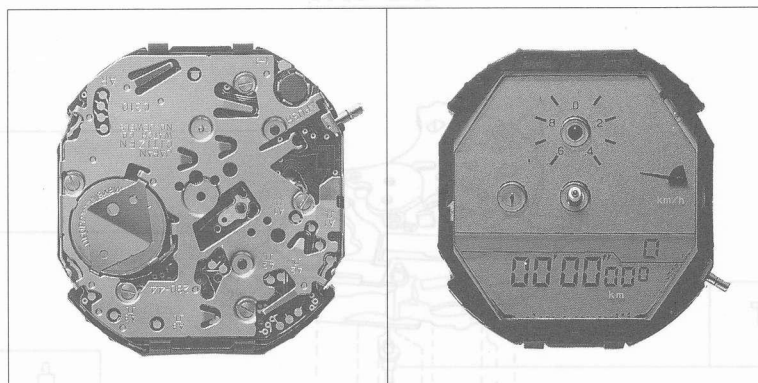

Caliber No. C300
キャリバー No. C300

EMMYWATCH
VINTAGE RESTORATIONS


CAL. C300

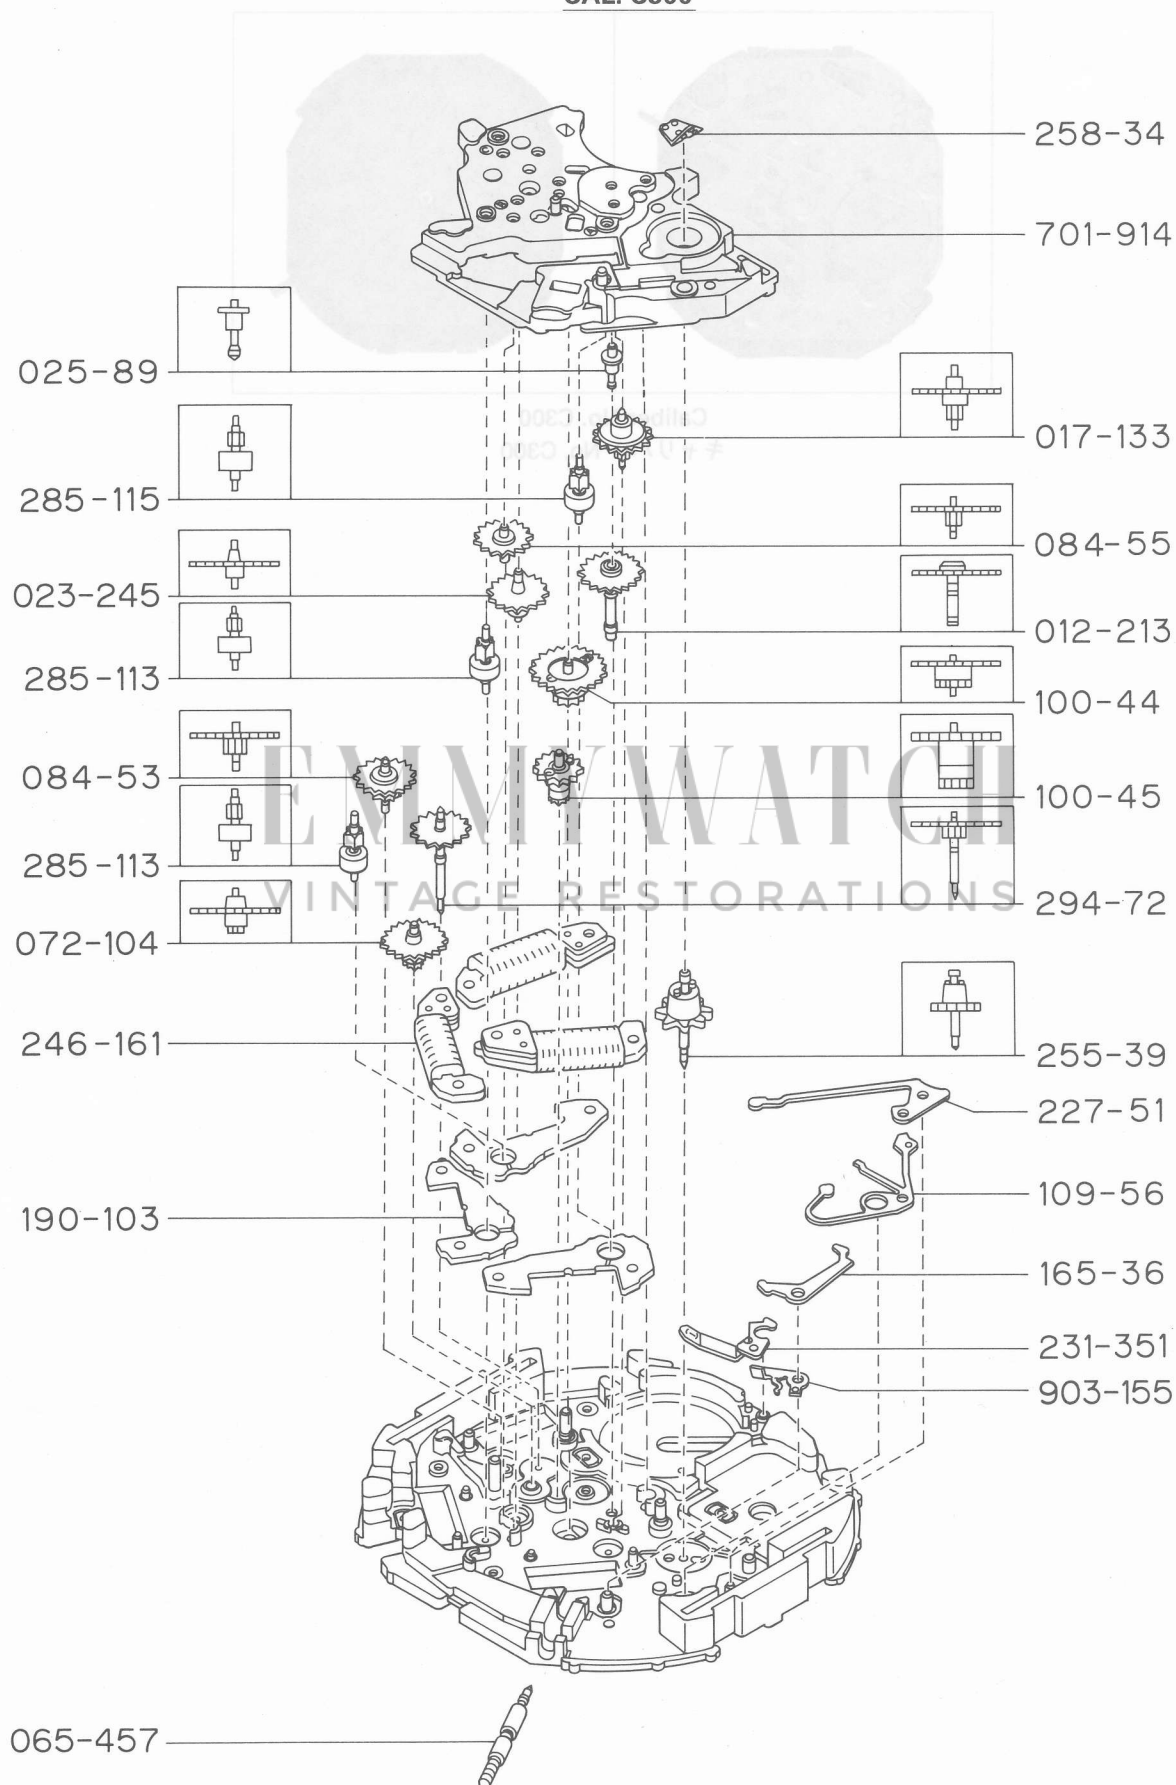

Catalog No. C30/C31/C32/C33-1

カタログ番号 C30/C31/C32/C33-1


CAL. C310/C320

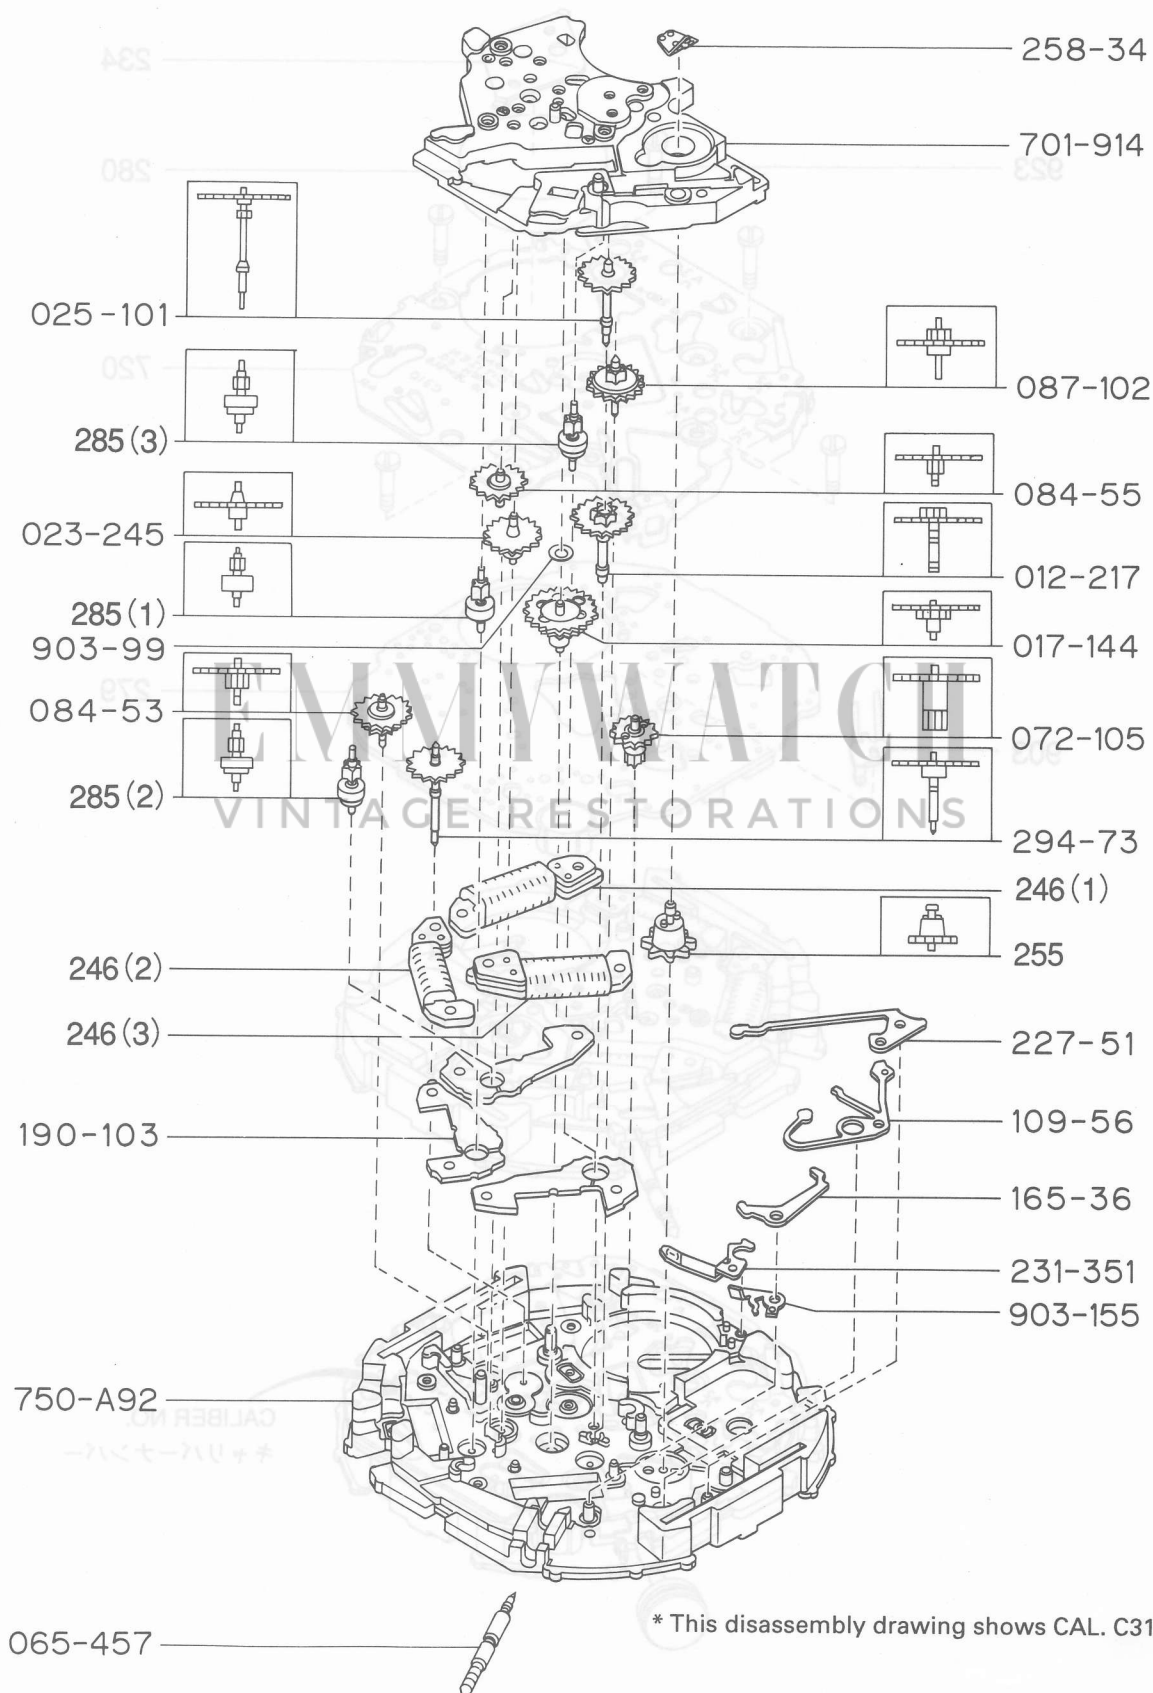


* This disassembly drawing shows CAL. C310.

※ この展開図はCAL. C310のものです。

CAL. C300/C310/C320

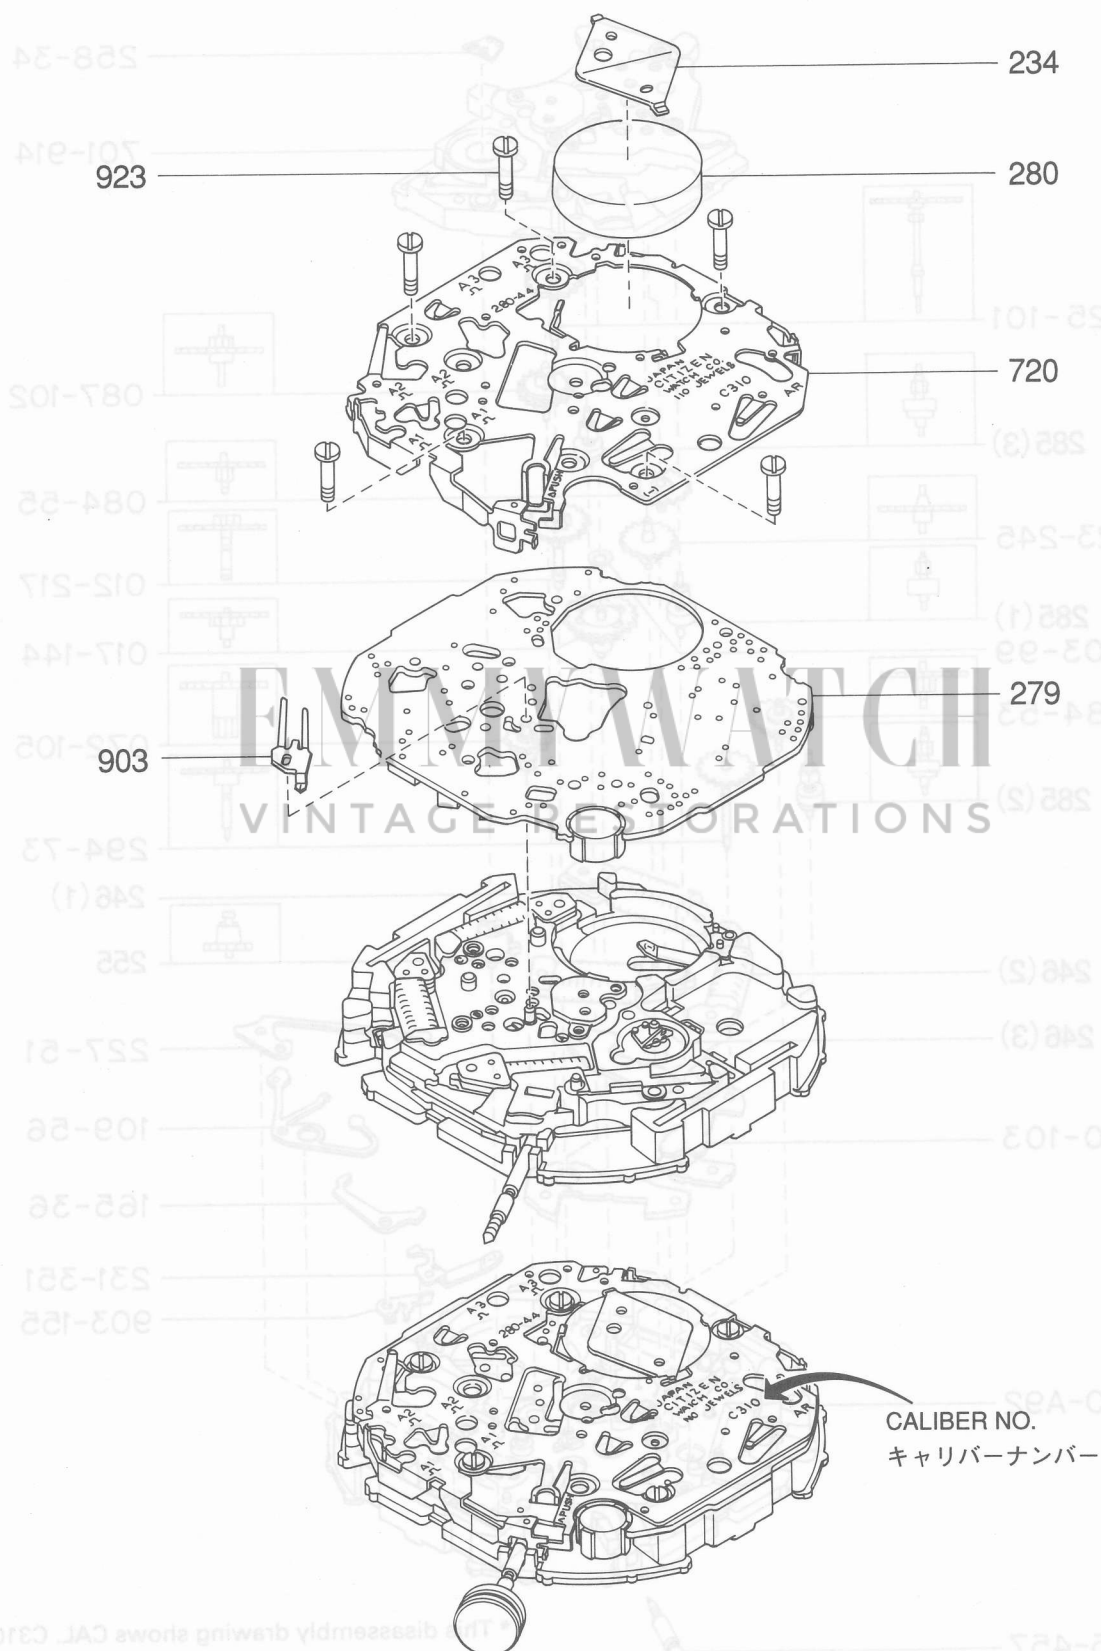

CAL. C300

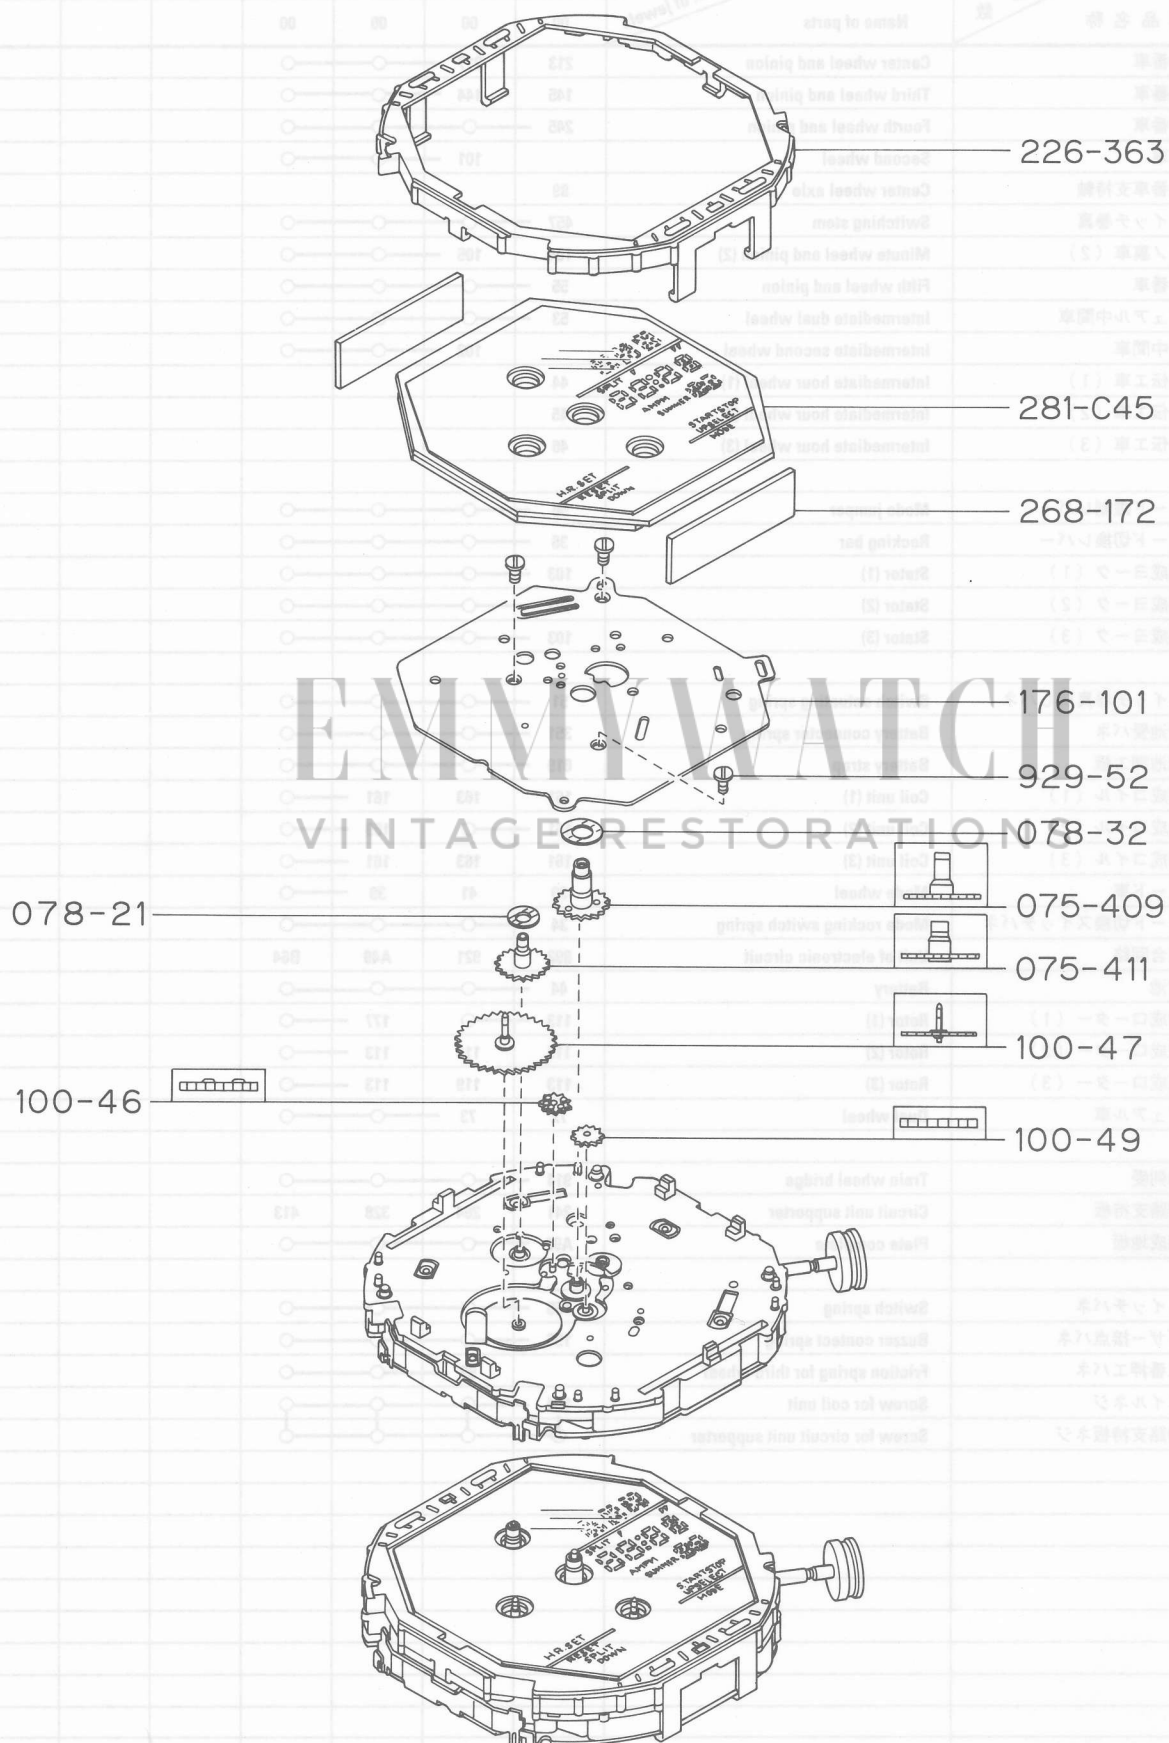

[illegible]

※4 黒地（白数字）