




Longines 6902,6912,6922,6942 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>


Calibers 6902/6912/6922/6942/6952/6972

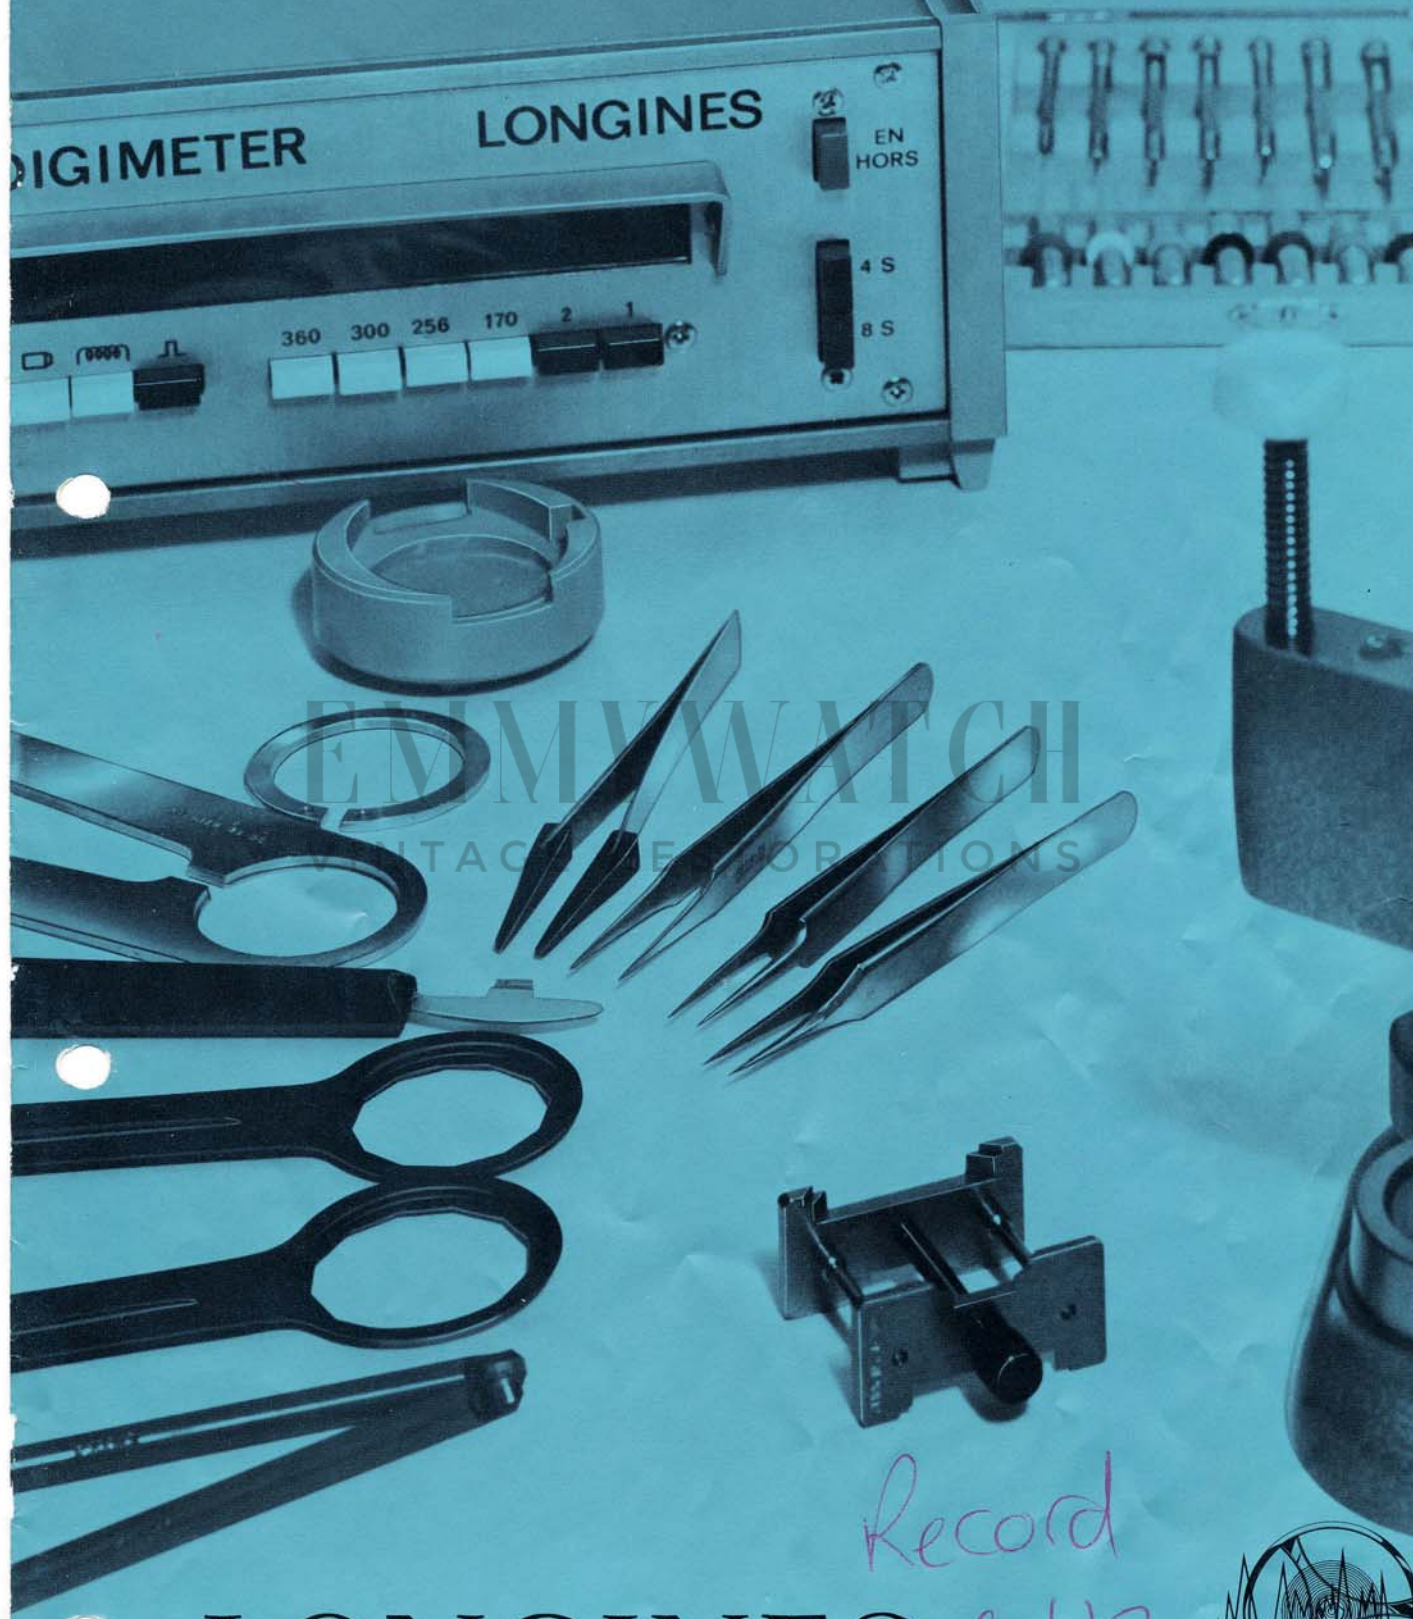

LONGINES

Record

6912

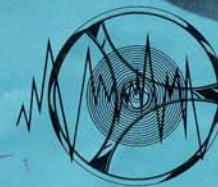




Cal. 6902/6922/6942



Cal. 6912/6952/6972




Cal. 6902/6922

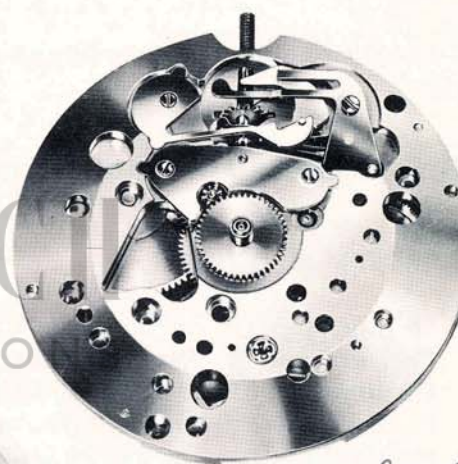

Cal. 6942



Cal. 6972

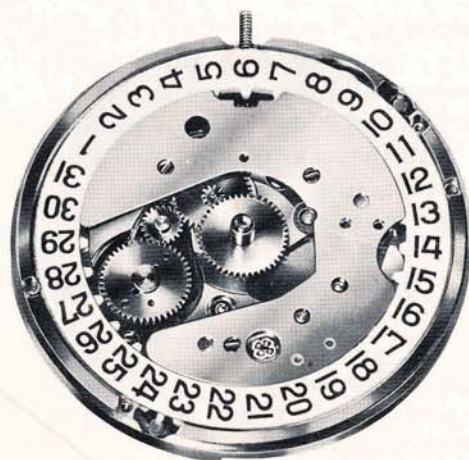

Cal. 6912



Cal. 6952

Recor
6113

3.5 WINDING, HAND-SETTING, DATE-SETTING AND STOP-SECOND MECHANISMS

The three-position winding-stem performs the following functions :

- 3.5.1 When pushed in, winding by hand.
- 3.5.2 In the intermediate position, rapid setting of the date-indicator in either direction, without shifting the hands.
- 3.5.3 When pulled out, setting the hands to the right time ; this can be done

to the exact second in the case of calibers fitted with a stop-second device. The hand is stopped when it reaches the numeral 60. The movement starts working again as soon as the stem is pushed right home.


The stem can be extracted from its fitting by pressing the setting-lever axle with the appropriate tool. See section 5.3.

N.B.

Do not set the date-indicator between 11 p.m. and midnight.

Number	6902	6912	6922	6942	6952	6972	Name
100	XX		XX	XX			Plate
100		XX			XX	XX	Plate
105	XX	XX	XX	XX	XX	XX	Barrel bridge
110	XX						Train bridge
110		XX					Train bridge
110			XX				Train bridge
110				XX			Train bridge
110					XX		Train bridge
110						XX	Train bridge
121/3	XX	XX	XX	XX	XX	XX	Balance cock
125	XX	XX	XX	XX	XX	XX	Pallet cock
126				XX	XX	XX	Center-wheel cock
145						XX	Dial rest
166	XX	XX	XX	XX	XX	XX	Casing-clamp
180/1	XX	XX	XX				Barrel, complete (with mainspr
180/1				XX	XX	XX	Barrel, complete (with mainspr
201	XX	XX	XX				Center wheel
206				XX	XX	XX	Center wheel
210	XX	XX	XX				Third wheel
211				XX	XX	XX	Double third wheel
220	XX	XX					Fourth wheel, without bit
220				XX	XX	XX	Fourth wheel, without bit
224			XX				Fourth wheel with bit
240	XX	XX	XX				Cannon pinion
245				XX	XX		Cannon pinion
245						XX	Cannon pinion
250	XX	XX	XX	XX	XX		Hour wheel
255						XX	Hour wheel
260	XX	XX	XX	XX	XX	XX	Minute wheel
275				XX	XX		Sweep-second pinion
275						XX	Sweep-second pinion

Number	6902	6912	6922	6942	6952	6972	Name
307	XX	XX	XX	XX	XX	XX	Device complete (Spirofin)
370	XX	XX	XX	XX	XX	XX	Kif-jeweled, upper
371	XX	XX	XX	XX	XX	XX	Kif-jeweled, lower
401	XX	XX	XX	XX	XX	XX	Winding-stem
404	XX	XX	XX	XX	XX	XX	Stem for waterproof case
407	XX	XX	XX	XX	XX	XX	Clutch wheel
410	XX	XX	XX	XX	XX	XX	Winding-pinion
415	XX	XX	XX	XX	XX	XX	Ratchet wheel
420	XX	XX	XX	XX	XX	XX	Crown wheel
423	XX	XX	XX	XX	XX	XX	Crown-wheel core
425	XX	XX	XX	XX	XX	XX	Click
430	XX	XX	XX	XX	XX	XX	Click spring
435	XX	XX	XX	XX	XX	XX	Yoke
440	XX	XX	XX	XX	XX	XX	Yoke spring
443	XX	XX	XX	XX	XX	XX	Setting-lever
445	XX		XX	XX			Setting-lever spring
445		XX			XX	XX	Setting-lever spring
450	XX	XX	XX	XX	XX	XX	Setting-wheel
462	XX		XX	XX			Minute-work cock
479	XX	XX	XX	XX	XX	XX	Pressure spring for setting-lever
499						XX	Metal foil
705	XX	XX	XX	XX	XX	XX	Escape wheel
710	XX	XX	XX	XX	XX	XX	Jeweled pallet fork and staff
721	XX	XX	XX	XX	XX	XX	Balance with flat hairspring, regula
934	XX	XX	XX	XX	XX	XX	Dial bolt
963	XX	XX	XX	XX	XX	XX	Stem for waterproof crown
2535		XX			XX		Date-indicator guard
2535						XX	Date-indicator guard
2550		XX			XX		Calendar plate, mounted
2550						XX	Calendar plate, mounted
2557/1		XX			XX		Date-indicator, transferred
2557/1						XX	Date-indicator, transferred
2561/1						XX	Day-indicator, transferred
2564		XX			XX	XX	Date-corrector guard
2566		XX			XX	XX	Date-corrector
9433				XX	XX	XX	Stop lever
9473				XX	XX	XX	Stop-lever spring
5102	XX	XX	XX	XX	XX	XX	Case screw, special
5105	XX	XX	XX	XX	XX	XX	Barrel-bridge screw
5110	XX	XX	XX	XX	XX	XX	Train-bridge screw
5121/3	XX	XX	XX	XX	XX	XX	Balance-cock screw
5125	XX	XX	XX	XX	XX	XX	Pallet-cock screw
5126				XX	XX	XX	Center-wheel cock screw
5166	XX	XX	XX	XX	XX	XX	Casing-clamp screw
5374	XX	XX	XX	XX	XX	XX	Hairspring-holder screw
5415	XX	XX	XX	XX	XX	XX	Ratchet-wheel screw
5423	XX	XX	XX	XX	XX	XX	Screw for crown-wheel core
5425	XX	XX	XX	XX	XX	XX	Click screw
5445	XX	XX	XX	XX	XX	XX	Screw for setting-lever spring
5462	XX		XX	XX			Minute-work cock screw
5479	XX	XX	XX	XX	XX	XX	Screw for pressure spring for setting-lever
52535		XX			XX	XX	Screw for date-indicator guard
52550		XX			XX	XX	Screw for calendar plate
59433				XX	XX	XX	Screw for stop lever

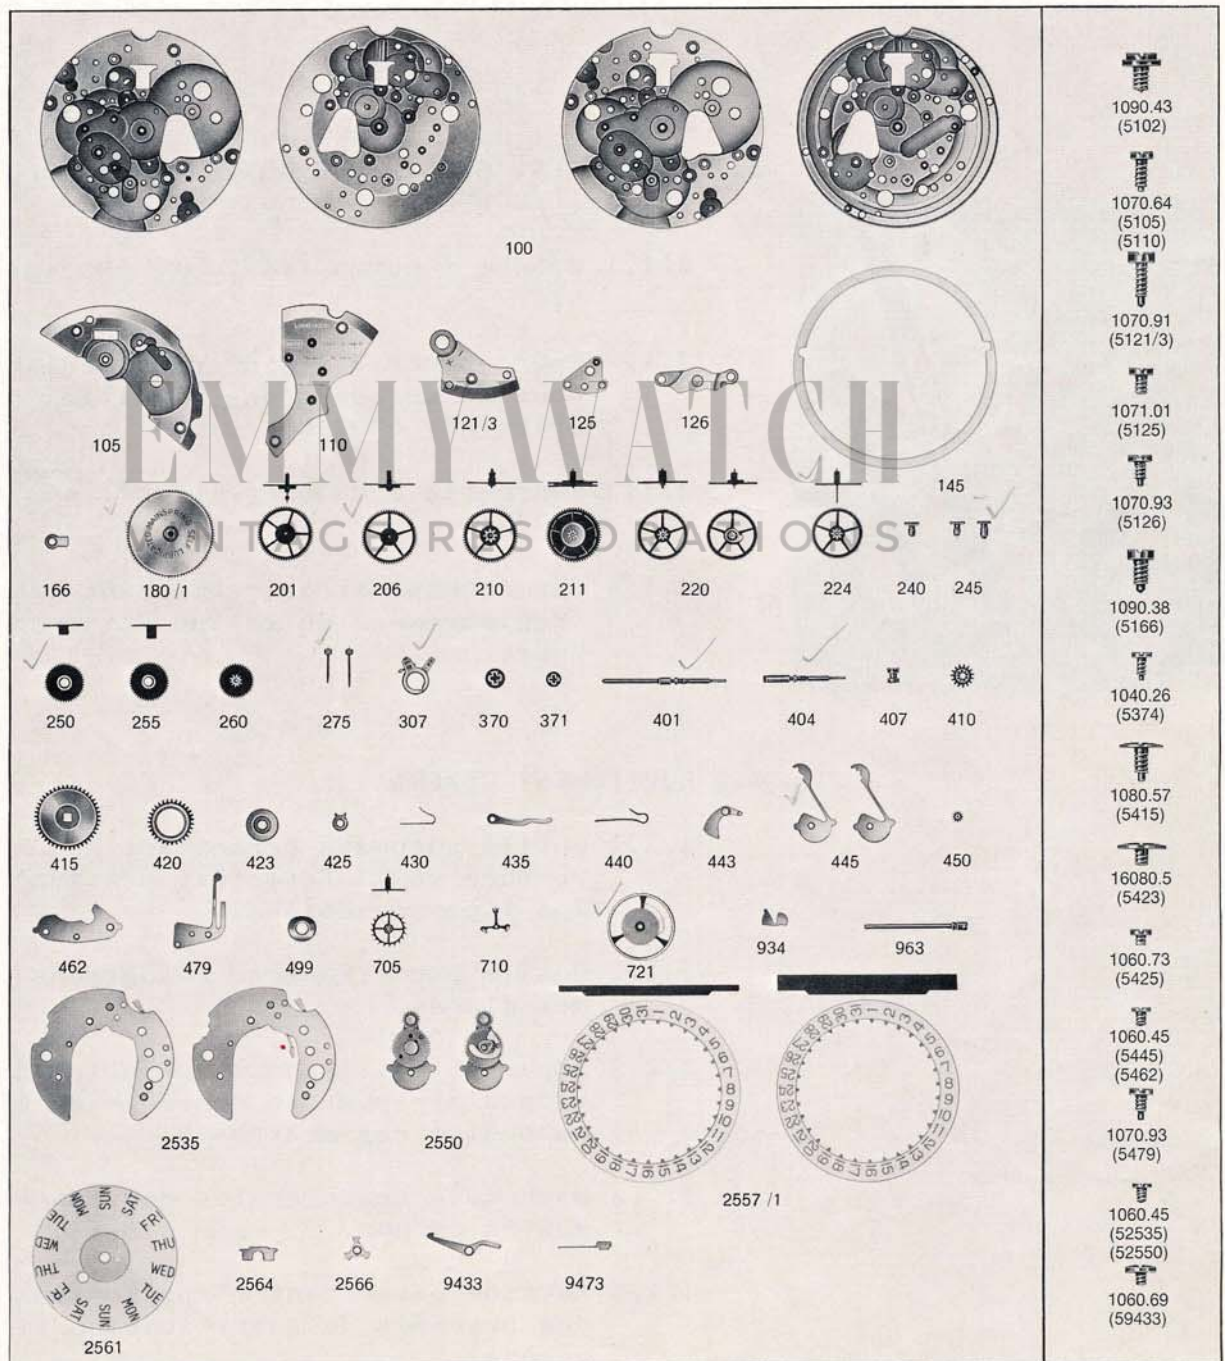

Date Jumper + Date Jumper Spring are attached to P.N. 25