



Miyota OS10,OS30,OS60,OS70 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

STATOR FOR CHRONOGRAPH 2	-	-	-	190-131	190-131	190-131
STOP LEVER	204-530	204-530	204-530	204-530	204-530	204-530
SUPPORTER FOR PLATE COMPLETE	226-497	226-497	226-497	226-497	226-497	226-459
SUPPORTOR FOR CHRONOGRAPH PLATE	720-203	720-526	720-204	720-209	720-228	720-448
SWITCH LEVER ACTUATING SPRING	-	-	-	-	-	282-920
SWITCH SPRING FOR ALARM	-	-	-	-	-	227-580
SWITCH STEM FOR ALARM	-	-	-	-	-	065-513
24 HOUR DRIVING WHEEL	-	100-670	-	-	-	-
THIRD WHEEL AND PINION	017-142	017-142	017-142	017-142	017-142	017-142
TRAIN WHEEL BRIDGE	701-E92	701-E92	701-E92	701-E92	701-E92	701-875
UNLOCKING CORRECTING WHEEL	-	-	-	-	-	213-450
UNLOCKING LEAD PLATE	-	-	-	-	-	184-155
UNLOCKING WHEEL	-	-	-	-	-	169-070
YOKE	071-128	071-128	071-128	071-128	071-128	071-128
LONGER SETTING STEM(24.00MM)						
LONG SETTING STEM(24.00MM-the length of the thread 10mm)	065-557	065-557	065-557	065-557	065-557	065-557
LONG SETTING STEM(24.00MM-the length of the thread 5.3mm)	(065-533)	(065-533)	(065-533)	(065-533)	(065-533)	(065-533)

EMMYWATCH
VINTAGE RESTORATIONS