





Rolex 1030 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>



Calibre 1030
Base Calibre 1030

- Ø28.5mm
- Train: 18.000
- Automatic
- Sweep second
- Shock Proof

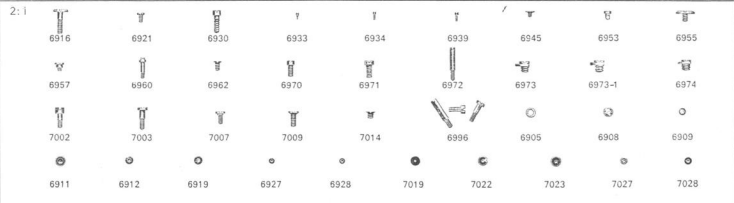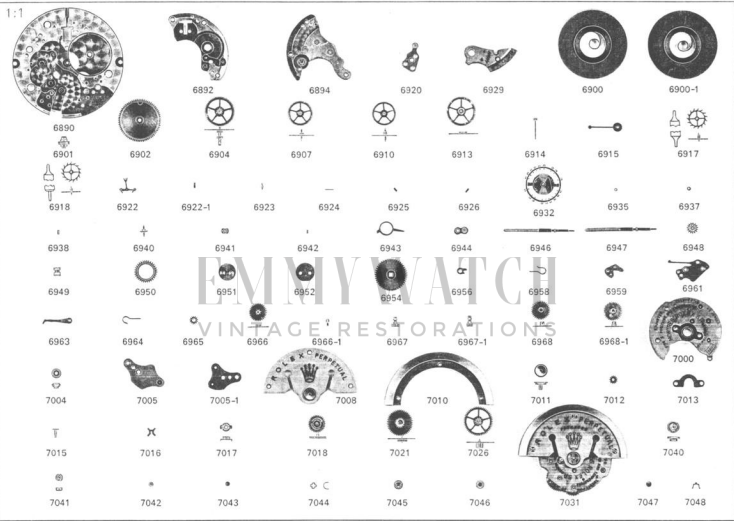

6890	Plate	6923	Pallet staff	6952	Crown wheel seat	6974	Screw for: Fixing the movement, Head bevelled	7019	Jewel for reversing-wheel, upper
6892	Barrel bridge	6924	Guard pin	6953	Screw for: Crown wheel core	6996	Set of screws for 1 watch movement	7021	Intermediate wheel No. 1
6894	Train wheel bridge	6926	Exit pallet jewel	6954	Ratchet wheel	7000	Bridge for self-winding mechanism	7022	Jewel for intermediate wheel No. 1, upper
6900	Mainspring, strength - standard	6927	Jewel for pallet staff, upper	6955	Screw for: Ratchet wheel	7002	Screw for: Bridge for selfwinding mechanism, tall head	7023	Jewel for intermediate wheel No. 1, lower
6900-1	Mainspring, strength - weak	6928	Jewel for pallet staff, lower	6956	Click	7003	Screw for: Bridge for selfwinding mechanism, short head	7026	Intermediate wheel No. 2
6901	Barrel arbor	6929	Balance cock	6957	Screw for: Click	7004	Rotor bearing	7027	Jewel for intermediate wheel No. 2, upper
6902	Barrel complete, without mainspring	6930	Screw for: Balance cock	6958	Click spring	7005	Sole for self-winding mechanism	7028	Jewel for intermediate wheel No. 2, lower
6904	Center wheel with cannon pinion	6932	Balance with Breguet hairspring, regulated	6959	Setting lever	7005-1	Intermediate sole for selfwinding mechanism	7031	Complete Rotor
6905	Jewel for center wheel, upper	6933	Screw for: Balance	6960	Screw for: Setting lever	7007	Screw for: Sole for selfwinding mechanism	7040	« Rolex Shockresisting » device for balance, upper
6907	Third wheel	6934	Screw for: Regulating the balance	6961	Setting lever spring	7008	Rotor weight bearing with riveted axle	7041	« Rolex Shockresisting » device for balance, lower
6908	Jewel for third wheel, upper	6935	Adjusting washer	6962	Screw for: Setting lever spring	7009	Screw for: Rotor weight bearing	7042	Jewelled in-setting, upper and lower
6909	Jewel for third wheel, lower	6937	Collet for Breguet hairspring	6963	Yoke	7010	Rotor weight	7043	Cap jewel, upper and lower
6910	Fourth wheel	6938	Stud for Breguet hairspring	6964	Yoke spring	7011	Rotor axle	7044	Spring with axle, upper and lower
6911	Jewel for fourth wheel, upper	6939	Screw for: Stud	6965	Setting wheel	7012	Winding-up wheel	7045	« Duofix » device for escape wheel, upper
6912	Jewel for fourth wheel, lower	6940	Balance staff	6966	Minute wheel	7013	Rotor bolt	7046	Jewelled body, upper
6913	Sweep-second wheel	6941	Roller complete	6966-1	Minute wheel stud	7014	Screw for: Rotor bolt	7047	Cap jewel, upper
6914	Sweep-second pinion	6942	Roller jewel	6967	Cannon pinion, height 2,23 mm	7015	Rotor bolt axle	7048	Spring, upper
6915	Spring for sweep-second pinion	6943	Regulator	6967-1	Cannon pinion, height 2,43 mm	7016	Gib		
6916	Screw for: Spring for sweep-second pinion	6944	Cap jewel with endpiece, lower, for escape wheel	6968	Hour wheel, height 1,27 mm	7017	Driver		
6917	Escape wheel, 25 jewels	6945	Screw for: Cap jewel with endpiece, lower, for escape wheel	6968-1	Hour wheel, height 1,47 mm	7018	Reversing wheel mounted with clicks		
6918	Escape wheel, 17 jewels	6946	Winding stem, thread 0,90 mm	6970	Screw for: Barrel bridge				
6919	Jewel for escape wheel, lower	6947	Winding stem, thread 1,10 mm	6971	Screw for: Train wheel bridge				
6920	Pallet cock	6948	Winding pinion	6972	Screw for: Dial				
6921	Screw for: Pallet cock	6949	Clutch wheel	6973	Screw for: Fixing the movement, Head flat, 0,25 mm				
6922	Jewelled pallet fork and staff	6950	Crown wheel	6973-1	Screw for: Fixing the movement, Head flat, 0,35 mm				
6922-1	Banking pin	6951	Crown wheel core						