



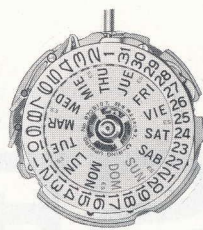

Seiko 7559A Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

Cal. 7559A

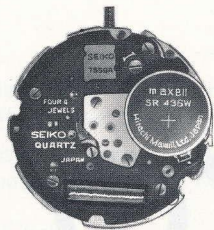

122 750



131 750



221 750



225 611



231 750



241 750



261 611



271 611



282 601



354 753



383 601



384 601



387 601



388 753



390 601



391 750



701 750



☆801 601



802 601



803 757



808 601



810 601



817 611




868 601



☆870 510




873 601

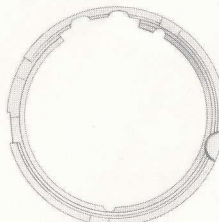

884 605



963 610

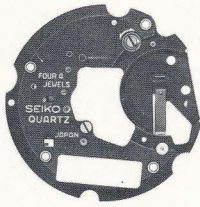

4001 751



4002 753



4032 753



4050 746



4146 750



☆4219 753



4239 750



4242 754



4259 750



4259 751



4450 753



4455 750



☆Maxell SR43SW



022 257



022 468



022 491



022 494



022 760



022 761

3/4

Cal. 7559A

Characteristics

Casing diameter : ϕ 27.0 mm
 Maximum height : 4.6 mm without battery
 Jewels : 4 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor system (2 poles)
 Regulation system : Trimmer condenser
 Second setting device
 Calendar (Day & Date)
 Instant setting device for day & date calendar
 Bilingual change-over system for day of the week
 Illuminating light : Illuminates the dial in the dark by depressing the crown.
 Battery life indicator : Second hand moves in two-second interval.

PART NO.	PART NAME	PART NO.	PART NAME
122 750	Center wheel bridge	027 866	Switch lever axle
131 750	Third wheel bridge	022 257	Setting lever spring screw
221 750	Center wheel & pinion	022 468	Center wheel bridge screw
225 611	Cannon pinion	022 468	Third wheel bridge screw
231 750	Third wheel & pinion	022 468	Circuit block screw
241 750	Fourth wheel & pinion	022 468	Screw for plus terminal of battery connection
261 611	Minute wheel	022 468	Date driving wheel screw
271 611	Hour wheel	022 491	Minute wheel bridge screw
282 601	Clutch wheel	022 494	Reset lever screw
354 753	Winding stem	022 760	Day jumper screw
383 601	Setting lever	022 760	Date dial guard screw
384 601	Yoke (Clutch lever)	022 761	Dial screw
387 601	Minute wheel bridge	☆Maxell SR43SW	Silver oxide battery
388 753	Setting lever spring	☆U.C.C.301	
390 601	Setting lever axle		
391 750	Second setting lever		
701 750	Fifth wheel & pinion		
☆801 601 }	Date dial		
☆801 604 }			
802 601	Date driving wheel		
803 757	Setting wheel lever complete		
808 601	Date dial guard		
810 601	Date jumper		
817 611	Intermediate date wheel		
868 601	Day finger		
☆870 510 }	Day star with dial disk		
☆870 601 }			
873 601	Day jumper		
884 605	Holding ring for dial		
963 610	Snap for day star with dial disk		
4001 751	Circuit block		
4002 753	Coil block		
4032 753	Bulb block		
4050 746	Circuit bridge plate		
4146 750	Step rotor		
☆4219 753	Bulb terminal insulator		
4239 750	Rotar stator		
4242 754	Plus temrinal of battery connection		
4259 750	Anti-magnetic shield plate A		
4259 751	Anti-magnetic shield plate B		
4450 753	Switch lever		
4455 750	Reset lever		
011 405	Lower hole jewel for fifth wheel		
011 405	Upper hole jewel for fifth wheel		
011 537	Lower hole jewel for step rotor		
011 537	Upper hole jewel for step rotor		
023 076	Pin for anti-magnetic shield plate		

☆⇨ Please see remarks on the reverse page.

Part numbers in light letters are not shown in photos.

Cal. 7559A

Remarks :

Date dial

- ☆ 801 601 (Black figures on white background) } Used for both the crown and calendar frame at
☆ 801 604 (White figures on black background) } **3 o'clock position.**

If any other type of date dial is required, specify ① Cal. No. ② The crown position ③ The calendar frame position and ④ Dial No.

Day star with dial disk

- ☆ 870 510 (English ↔ Spanish, black figures on white background) }
☆ 870 601 (English ↔ Spanish, white figures on black background) }

Used for both the crown and calendar frame at **3 o'clock position.** If any other type of day star with dial disk is required, specify the number printed on the disk.

Bulb terminal insulator

- ☆ 4219 753 When the bulb terminal insulator is adhered to the main plate, use the adhesive for glass.
Refer to **"SEIKO QUARTZ TECHNICAL GUIDE"** for details.

Battery

- ☆ Maxell SR43SW } The applied battery for this calibre might be added the substitutive in the future.
☆ U.C.C. 301 } In that case, please refer to separate **"BATTERIES FOR SEIKO QUARTZ WATCHES"**.

EMMYWATCH
VINTAGE RESTORATIONS