



A. Schild 1475 Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

EBAUCHES S. A.

NEUCHÂTEL

SWITZERLAND

Edited and published by Ebauches S. A.

(French, English, German, Italian, Spanish)

Copyright 1955 by Ebauches S. A.




FABRIQUE D'EBAUCHES
A. SCHILD S. A., GRENCHEN

$11\frac{1}{2}'''$ 1475
ALERTIC
25,60 mm

Lever movement, direct sweep second, with

Alarm device

Caliber with two barrels


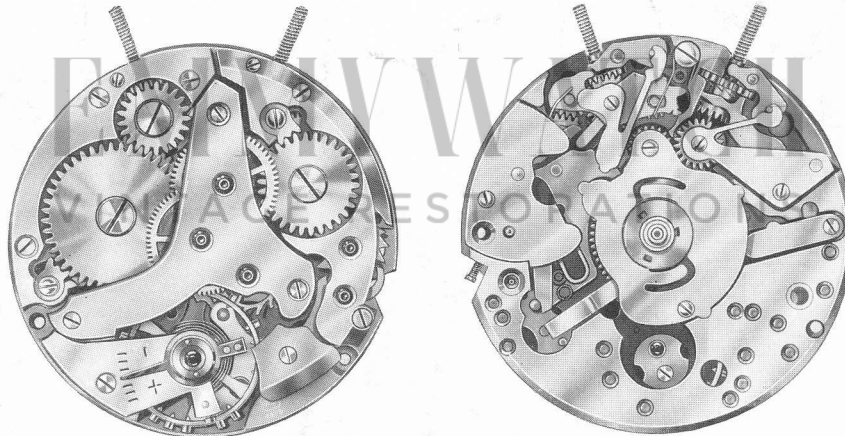


Enlarged movement

TECHNICAL AND PRACTICAL COMMUNICATION FOR THE GUIDANCE OF WATCH REPAIRERS

Description and numbering of spare parts according to the « Technological Dictionary of Watch Parts »,
2nd edition.

100 Plate	705 Escape wheel and pinion with straight pivots	7488 Alarm bolt spring
105 Barrel bridge	710 Jewelled pallet fork and staff	7496 Alarm bolt
110 Train wheel bridge	714 Pallet staff	7498 Alarm hammer
121 Balance cock for flat hairspring	721 Balance with flat hairspring, regulated	7506 Alarm bolt lid
125 Pallet cock	723 Balance staff, pivoted	7771 Alarm mainspring
126 Center wheel cock	730 Roller	5102 Case screw
182 Barrel and cover	770 Mainspring	5105 Barrel bridge screw
195 Barrel arbor	7151 Unlocking wheel holder	5110 Trainwheel bridge screw
206 Center wheel	7153 Alarm barrel bridge	5121 Balance cock screw
210 Third wheel	7182 Alarm barrel with cover	5125 Pallet cock screw
227 Sweep second wheel	7196 Alarm barrel arbor	5126 Center wheel cock screw
245 Cannon pinion	7288 Unlocking wheel	5311 Upper end-piece screw, for balance
255 Hour wheel	7290 Alarm wheel	5330 Lower end-piece screw, for balance
260 Minute wheel	7296 Intermediate setting wheel for alarm	5343 Bearing plate screw, for sweep-second
301 Regulator for flat hairspring	7307 Alarm setting and winding rocker	5415 Ratchet wheel screw
311 Upper cap jewel with end-piece, for balance	7310 Spring for alarm setting and winding rocker	5420 Crown wheel screw
330 Lower cap jewel with end-piece, for balance	7311 Spring for alarm setting connection wheel	5425 Click screw
343 Bearing plate, non-jewelled for sweep second wheel	7401 Alarm winding stem	5443 Setting lever screw
401 Winding stem	7410 Alarm winding pinion	5445 Screw for setting lever spring
407 Clutch wheel	7417 Alarm ratchet wheel, lower	5738 Hairspring stud screw
410 Winding pinion	7418 Alarm ratchet wheel, upper	5750 Dial screw
415 Ratchet wheel	7421 Alarm crown wheel lower	57151 Screw for unlocking wheel holder
420 Crown wheel	7426 Alarm click	57153 Screw for alarm barrel bridge
422 Crown wheel ring	7436 Alarm click spring	57311 Screw for spring for alarm setting connection wheel
425 Click	7443 Alarm setting lever	57418 Screw for alarm ratchet wheel, upper
430 Click spring	7444 Alarm setting lever spring	57426 Alarm click screw
435 Yoke	7459 Disconnector	57443 Alarm setting lever screw
440 Yoke spring		57444 Screw for alarm setting lever spring
443 Setting lever		57459 Disconnector screw
445 Setting lever spring		57506 Screw for alarm bolt lid
450 Setting wheel		

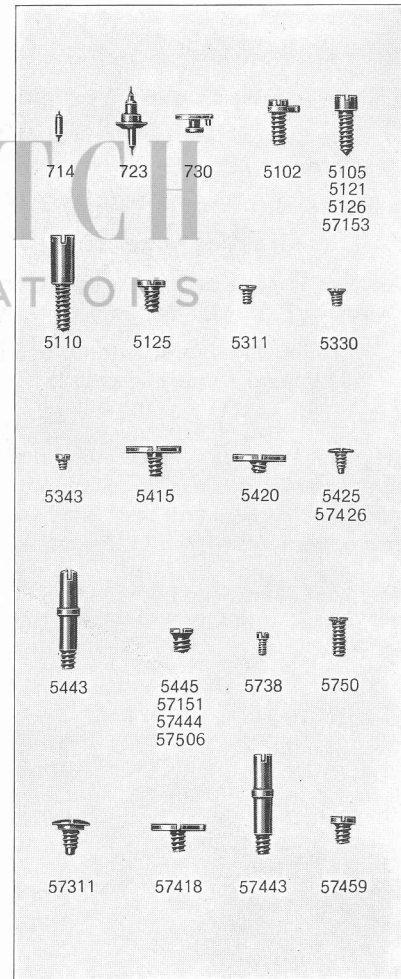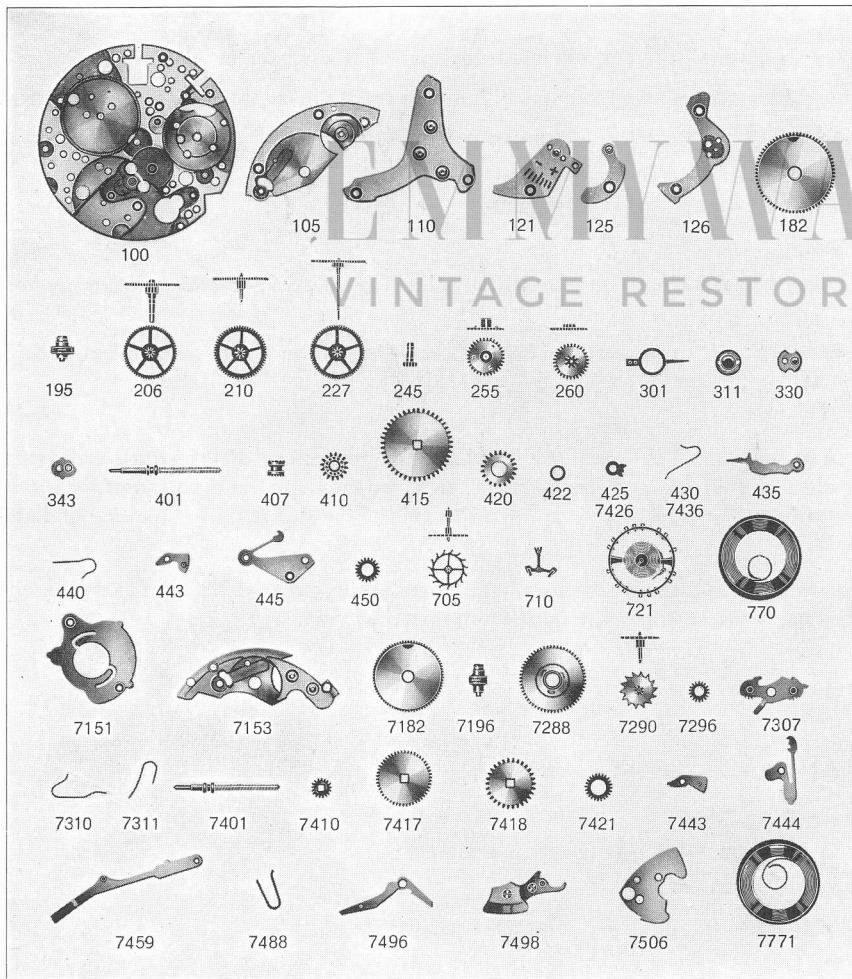

When ordering parts for a shock-protecting device, make certain to specify its exact type. For further details of the description and numbering of spare parts, see the « Technological Dictionary of Watch Parts », 2nd edition, published by Ebauches S. A.

Order repair parts through your jobber, giving the numbers and designations, thus insuring prompt and efficient deliveries.