




Citizen 6750,6760 Movement Parts (7)

Compiled by EmmyWatch - <https://www.emmywatch.com>

CAL. 6760*

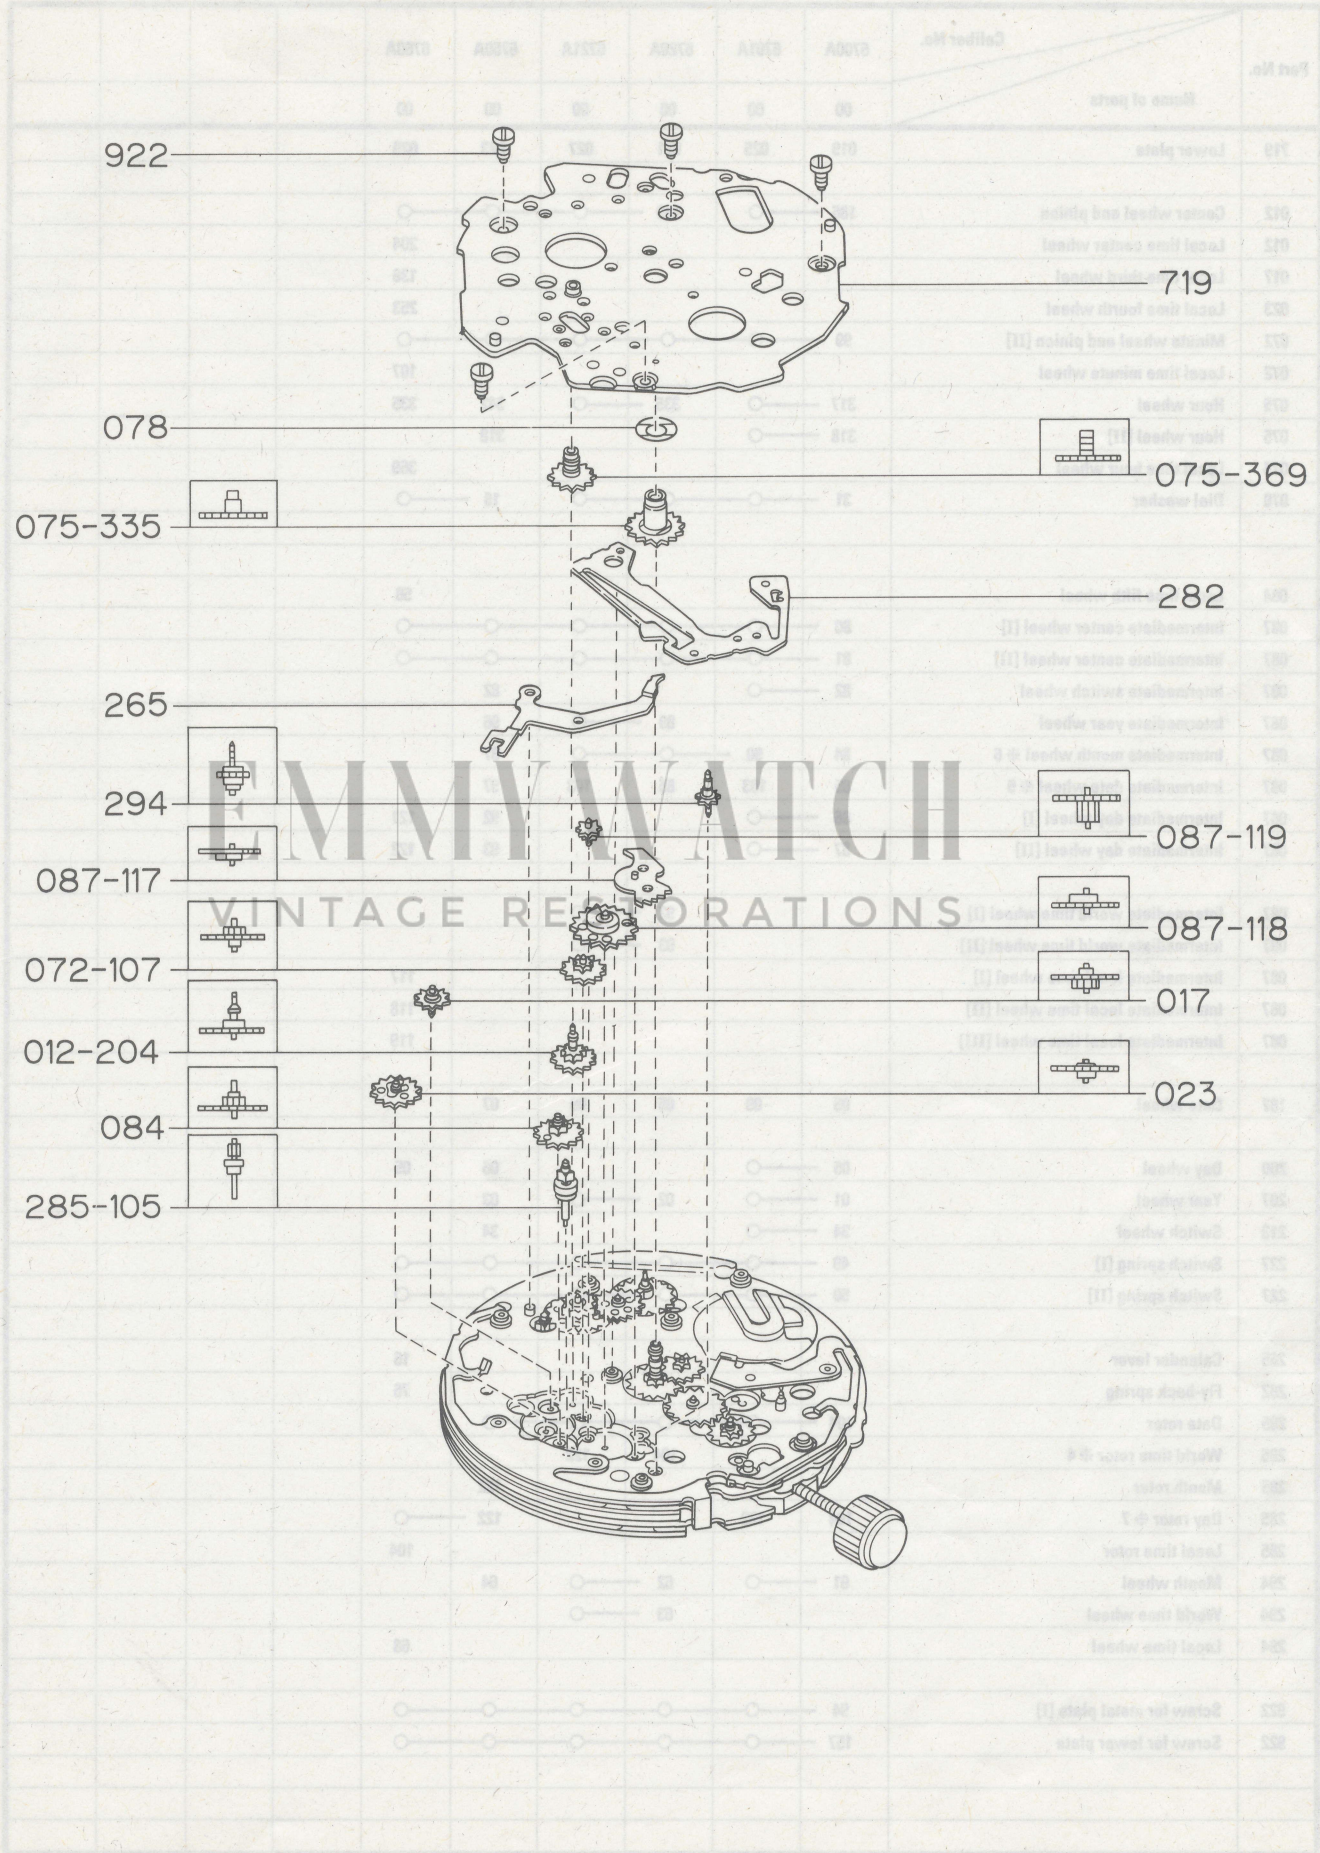

Part No.	Caliber No. Name of parts	6700A	6701A	6720A	6721A	6750A	6760A				
		00	00	00	00	00	00				
719	Lower plate	019	025	021	027	023	029				
012	Center wheel and pinion	186 — ○		189 — ○	— ○	— ○	— ○				
012	Local time center wheel						204				
017	Local time third wheel						136				
023	Local time fourth wheel						253				
072	Minute wheel and pinion [II]	99 — ○	— ○	— ○	— ○	— ○	— ○				
072	Local time minute wheel						107				
075	Hour wheel	317 — ○		335 — ○	— ○	342	335				
075	Hour wheel [II]	318 — ○				318					
075	Local time hour wheel						369				
078	Dial washer	31 — ○	— ○	— ○	— ○	18 — ○					
084	Local time fifth wheel						58				
087	Intermediate center wheel [I]	80 — ○	— ○	— ○	— ○	— ○	— ○				
087	Intermediate center wheel [II]	81 — ○	— ○	— ○	— ○	— ○	— ○				
087	Intermediate switch wheel	82 — ○				82					
087	Intermediate year wheel			89 — ○	— ○	96					
087	Intermediate month wheel # 6	84	90 — ○	— ○	— ○	97					
087	Intermediate date wheel # 5	85	103	85	103	97					
087	Intermediate day wheel [I]	86 — ○				92	121				
087	Intermediate day wheel [II]	87 — ○				93	122				
087	Intermediate world time wheel [I]			92 — ○	— ○						
087	Intermediate world time wheel [II]			93 — ○	— ○						
087	Intermediate local time wheel [I]						117				
087	Intermediate local time wheel [II]						118				
087	Intermediate local time wheel [III]						119				
187	Date wheel	05	09	05	09	07					
200	Day wheel	05 — ○				06	05				
207	Year wheel	01 — ○		02 — ○	— ○	03					
213	Switch wheel	34 — ○				34					
227	Switch spring [I]	49 — ○	— ○	— ○	— ○	— ○	— ○				
227	Switch spring [II]	50 — ○	— ○	— ○	— ○	— ○	— ○				
265	Calendar lever						16				
282	Fly-back spring						76				
285	Date rotor	104 — ○	— ○	— ○	— ○	— ○					
285	World time rotor # 4			104	122						
285	Month rotor					122					
285	Day rotor # 7	104	122			122 — ○					
285	Local time rotor						104				
294	Month wheel	61 — ○		62 — ○	— ○	64					
294	World time wheel			63 — ○	— ○						
294	Local time wheel						68				
922	Screw for metal plate [I]	94 — ○	— ○	— ○	— ○	— ○	— ○				
922	Screw for lower plate	157 — ○	— ○	— ○	— ○	— ○	— ○				