



Seiko 2620B Movement Parts (1)

Compiled by EmmyWatch - <https://www.emmywatch.com>

SEIKO

QUARTZ

Cal. 2620B

EMMYWATCH
VINTAGE RESTORATIONS

PARTS LIST

Cal. 2620B



131 275



231 261



241 162



261 260



☆270 262



☆271 262



281 261



282 262



☆354 261



☆354 263



383 260



384 261



387 262



389 260



391 260



436 261



491 260



493 260

EMMYWATCH
VINTAGE RESTORATIONS



495 261



701 260



706 261



4001 270



4002 262



4146 260



4216 260



4219 261



4240 260



4242 262



4270 261



4455 260



011 409



☆SEIKO SB-DL

012 151	012 159	012 459	012 768	017 125	017 126	017 127	017 131
017 132	017 225	017 228	017 936				3/4

Cal. 2620B

Characteristics

Casing diameter : ϕ 17.6 mm
 Maximum height : 3.1 mm without battery
 Jewels : 2 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor system (2 poles)
 Regulation system : Trimmer condenser

PART NO.	PART NAME	PART NO.	PART NAME
131 275	Third wheel bridge	4216 260	Insulator for battery
231 261	Third wheel & pinion	4219 261	Insulator for battery connection
241 162	Fourth wheel & pinion	4240 260	Rotor stator
261 260	Minute wheel	4242 262	Plus terminal of battery connection
☆ 270 262	Center minute wheel with cannon pinion (1.74 mm, silver)	4270 261	Battery connection
☆270 265	Center minute wheel with cannon pinion (2.26 mm, silver)	4455 260	Reset lever
☆270 266	Center minute wheel with cannon pinion (1.84 mm, silver)	011 409	Upper hole jewel for step rotor
☆270 267	Center minute wheel with cannon pinion (2.85 mm, silver)	011 409	Lower hole jewel for step rotor
☆270 274	Center minute wheel with cannon pinion (1.74 mm, gold plated)	012 151	Third wheel bridge screw
☆270 275	Center minute wheel with cannon pinion (2.26 mm, gold plated)	012 151	Circuit block screw A
☆270 276	Center minute wheel with cannon pinion (1.84 mm, gold plated)	012 151	Coil block screw (Screw for plus terminal of battery connection)
☆270 277	Center minute wheel with cannon pinion (2.85 mm, gold plated)	012 159	Circuit block screw B
☆ 271 262	Hour wheel (0.85 mm, silver)	012 459	Case screw
☆271 266	Hour wheel (0.95 mm, gold)	012 768	Setting lever axle spring screw
☆271 267	Hour wheel (1.37 mm, silver)	012 768	Minute wheel bridge screw
☆271 268	Hour wheel (1.91 mm, silver)	017 125	Tube for circuit block A
281 261	Setting wheel	017 126	Tube for circuit block B
282 262	Clutch wheel	017 127	Tube for circuit block C
☆ 354 261	Winding stem (13.13 mm)	017 131	Tube for coil block screw
☆ 354 263	Winding stem (18.58 mm)	017 132	Second setting lever pin
383 260	Setting lever	017 225	Tube for third wheel bridge screw A
384 261	Yoke (Clutch lever)	017 228	Tube for third wheel bridge screw B
387 262	Minute wheel bridge	017 936	Eccentric dial pin
389 260	Setting lever axle spring	☆SEIKO TR726SW)	Silver (II) oxide battery
391 260	Second setting lever	☆SEIKO SB-DL)	
436 261	Lower end-piece for third wheel	☆Maxell SR726SW)	Silver oxide battery
491 260	Dial washer	☆U.C.C.397)	
493 260	Hour wheel ring (Gold, 0.03 mm thickness)		
493 261	Hour wheel ring (Silver, 0.05 mm thickness)		
493 262	Hour wheel ring (Gold, 0.07 mm thickness)		
495 261	Spacer for third wheel bridge		
701 260	Fifth wheel & pinion		
706 261	Sixth wheel & pinion		
4001 270	Circuit block		
4002 262	Coil block		
4146 260	Step rotor		





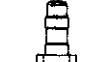




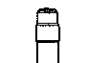
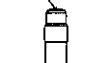

☆⇔ Please see remarks on the reverse page.
 Part numbers in light letters are not shown in photos.

Cal. 2620B

Remarks :

Center minute wheel with cannon pinion, Hour wheel.

There are four different types as specified below.
Combination:

Type	Center minute wheel with cannon pinion		Hour wheel
a	Silver  ☆270 262	Gold plated  ☆270 274	Silver  ☆271 262
b	Silver  ☆270 265	Gold plated  ☆270 275	Gold  ☆271 267
c	Silver  ☆270 266	Gold plated  ☆270 276	Silver  ☆271 266
d	Silver  ☆270 267	Gold plated  ☆270 277	Silver  ☆271 268

Winding stem.....Refer to the photograph on the front page.

☆354 261.....Short winding stem (Thread is provided completely on the crown position.)

☆354 263.....Long winding stem (Thread is provided only on the end of the crown position.)

If the combination of the winding stem and case is unknown, check the case number and refer to "SEIKO Quartz Casing Parts List" to choose an corresponding winding stem.

Battery

- ☆ Maxell SR726SW
- ☆ U.C.C. 397
- ☆ SEIKO TR726SW
- ☆ SEIKO SB-DL

The substitutive battery might be added to the applied battery in the future.
In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".

Note that SEIKO battery is marked with "SEIZAIKEN" on its (+) side.